

AR7070EXT

Trim parts for thermostatic mixer with 3 stop valves

Parti esterne per miscelatore termostatico con 3 rubinetti d'arresto


Parties extérieures pour mitigeur thermostatique avec 3 robinets d'arrêt

Partes exteriores para termostático con 3 llaves de paso

AP-Teile für Thermostatbatterie mit 3 UP-Ventilen

Afbouwdelen voor thermostatische mengkraan met 3 stopkranen


hotbath
italian bathroomware

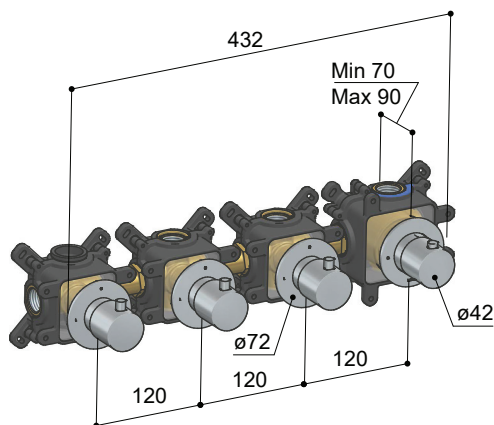


BEFORE STARTING / PRIMA DI INIZIARE / AVANT DE COMMENCER / ANTES DE EMPEZAR / VOR DEM START / VOORDAT JE BEGINT

 P bar	 MAX 5 1 MIN	 3 1	 ON	 15s	 OFF	RECOMMENDED: BALANCED PRESSURES bar bar
 T °C	 MAX 80	 60 45	 ON	 15s	 OFF	 bar bar

Once the mixer is installed in the wall, cut along the finished wall and remove the plastic protection

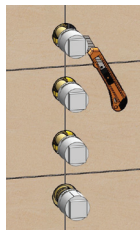


Put the silicone between the cover plate and the wall

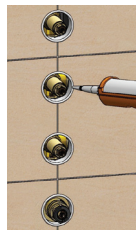


TRIM FIXING

1. Fix the cover plate (1) on the threaded rod (2).
2. Screw the adapter (4) with their O-ring (3), until the plate (1) is against the wall.
3. Fix the insert (5) and fix the screw (6).
4. Position the handle (7) on the insert (5) and rotate until the vertical position is reached.
5. Screw the grub screw (8) with a 2,5 mm Allen key.
6. Screw the lever (9).
7. Fix the cover plate (10) on the chromed ring (11).
8. Fix the handle (12) screw the grub screw (13) with a 2,5 mm Allen key.
9. Fix the cap (14).

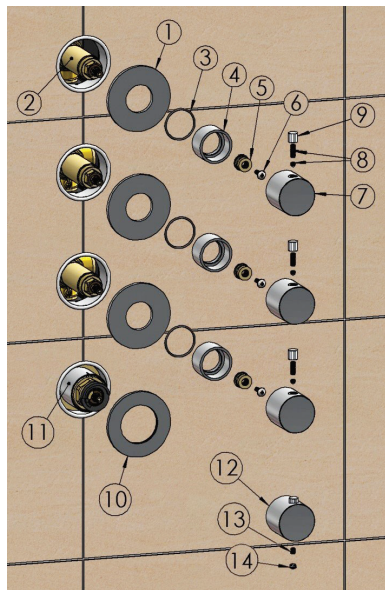


REPLACEMENT OF THE STOP VALVES HEADWORKS

1. Close the water inlets.
2. Remove the lever (3) and the grub screw (2).
3. Remove the grub screw (2) with 2,5 mm Allen key.
4. Unscrew the chromed adapter (4), being careful not to lose the O-ring (5).
5. Remove the cover plate (6).
6. Unscrew the threaded rod (7).
7. Unscrew the headwork (8) with a 17 mm wrench
8. Replace the headwork (8).
9. Screw the threaded rod (7).
10. Assemble the trim following the instructions of TRIM FIXING

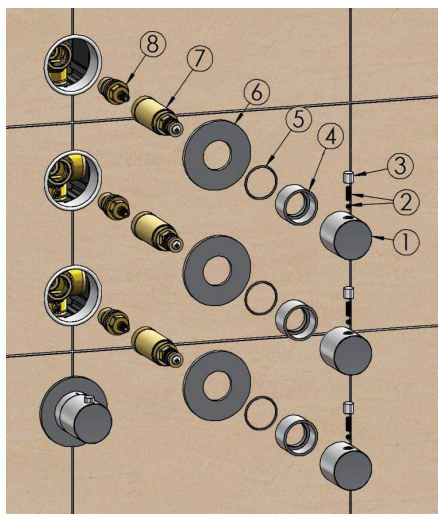


REMOVE AND CLEAN THERMOSTATIC CARTRIDGE

1. Remove the cup(1), Unscrew the grub screw (2) with an 2,5 mm Allen key
2. Remove the handle (3). Remove the plate (4).
3. Close the water inlets, in order to isolate the thermostatic cartridge.
4. Remove the stop ring(5).
5. Unscrew the thermostatic cartridge(6) anti-clockwise with a 30mm wrench.
6. Remove the thermostatic cartridge(6) and clean its filters under running water or leave to soak in vinegar in presence of limestone. Grease the O-rings and, if damaged, replace them with new ones. 2x OR 2175 mm 44,17 x 1,78 1x OR 2187 mm 47,35 x 1,78

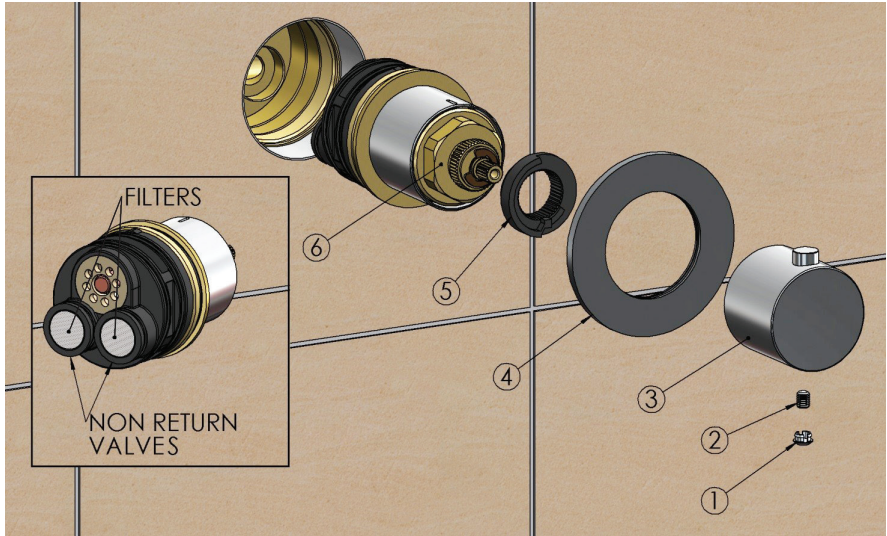


RE-INSTALL THE THERMOSTATIC CARTRIDGE

1. Check that the reference on the body cartridge is upward
2. Match the reference on the body of the thermostatic cartridge with the reference in the mixer body
3. Screw the thermostatic cartridge (6) clockwise with a 30mm wrench

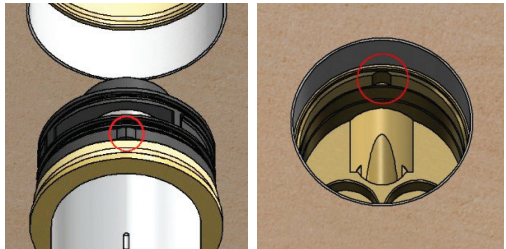

POSITION OF THE STOP RING

1. Place the stop ring(5) as shown in the image below.
2. Using the handle, rotate the broached rod (A) to reach the set temperature of 38°C (check the temperature with a thermometer).

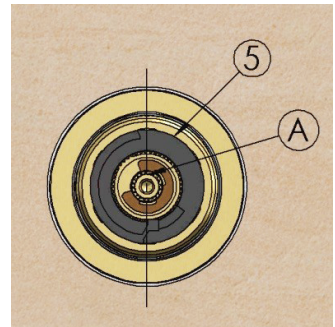

		WARNING			✓		✗	
IX BRUSHED STEEL	Inoxidable 316 steel Acciaio 316 inossidabile Acier 316 inoxyvable Inoxidierbare Edelstahl 316 Acero 316 inoxidable Inoxidable RVS 316	 WATER	 LIQUID SOAP	 SMOOTH CLOTH	 ABRASIVE SPONGE	 ACID/ABRASIVE DETERGENT		
BBP BRUSHED BRASS PVD	Inoxidable PVD finish Finitura PVD inossidabile Finition PVD inoxyvable Inoxidierbare PVD Ausführung Acabado PVD inoxidable Inoxidable PVD afwerking	 WATER	 LIQUID SOAP	 SMOOTH CLOTH	 ABRASIVE SPONGE	 ACID/ABRASIVE DETERGENT		
BCP BRUSHED COPPER PVD	Inoxidable PVD finish Finitura PVD inossidabile Finition PVD inoxyvable Inoxidierbare PVD Ausführung Acabado PVD inoxidable Inoxidable PVD afwerking	 WATER	 LIQUID SOAP	 SMOOTH CLOTH	 ABRASIVE SPONGE	 ACID/ABRASIVE DETERGENT		
BGP BRUSHED GUNMETAL PVD	Inoxidable PVD finish Finitura PVD inossidabile Finition PVD inoxyvable Inoxidierbare PVD Ausführung Acabado PVD inoxidable Inoxidable PVD afwerking	 WATER	 LIQUID SOAP	 SMOOTH CLOTH	 ABRASIVE SPONGE	 ACID/ABRASIVE DETERGENT		

TERMS OF SALE AND WARRANTY
CONDIZIONI DI VENDITA E GARANZIA
CONDITIONS DE VENTE ET GARANTIE

CONDICIONES DE VENTA Y GARANTÍA
VERKAUFSBEDINGUNGEN UND GARANTIE
VERKOOP- EN GARANTIEVOORWAARDEN

NETHERLANDS
BELGIUM
LUXEMBOURG
UK AND IRELAND

ALL COUNTRIES
(EXCEPTED BENELUX, UK AND IRELAND)

<https://www.hotbath.nl/garantie>

<https://hotbath.it/en/termsofsale>



Hotbath B.V.
Nieuwland Parc 210
2952 DC Alblasserdam
Nederland
E info@hotbath.nl
W hotbath.nl



Hotbath Srl
Via Marco Polo 135/D
I-55049 Viareggio
Italy
E info@hotbath.it
W hotbath.it

hotbath
italian bathroomware